





Connect the sides of each cross beam to the posts of the pergola. Use the longer M10 bolts, nuts and washers.




The position of the cross beams after attachment to the posts.




03.

Place a wall section between the cross beams. Fasten with the short M10 bolts, nuts and washers. 2 bolts to the top cross beam and 2 bolts to the bottom cross beam.



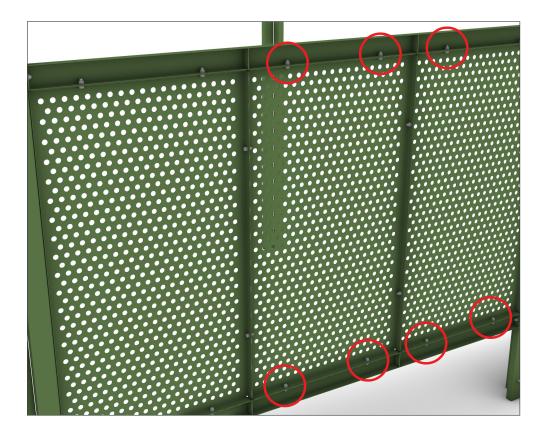

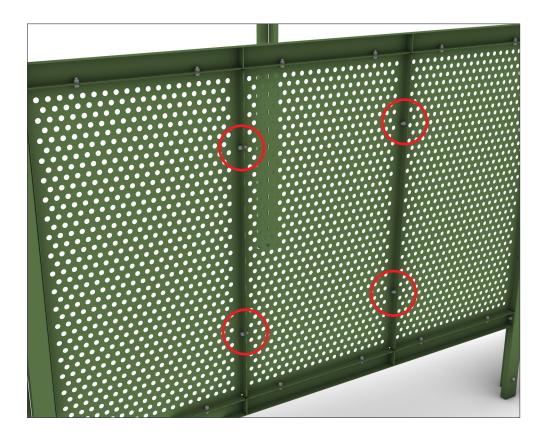


04.

Place the additional wall sections next to the mounted first section. Fasten with the short M10 bolts to the cross beams.


05.

Connect the wall sections to each other with 4 short M10 bolts.

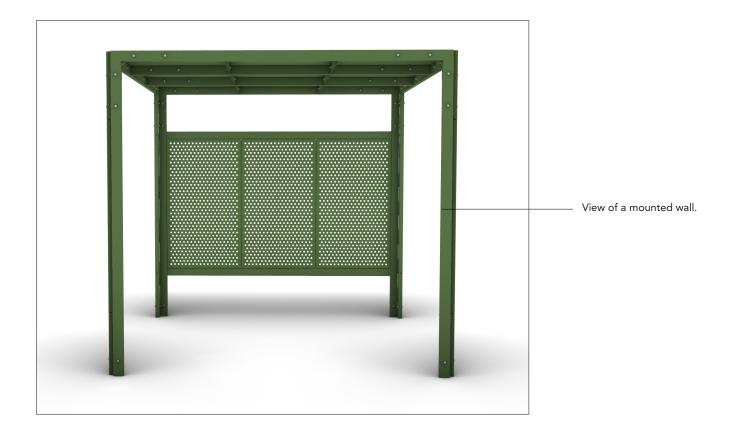

LAGERSTRÖM BALLOTA Planter box Mounting instructions









View of the 4 sides attached.

LAGERSTRÖM BALLOTA Planter box Mounting instructions

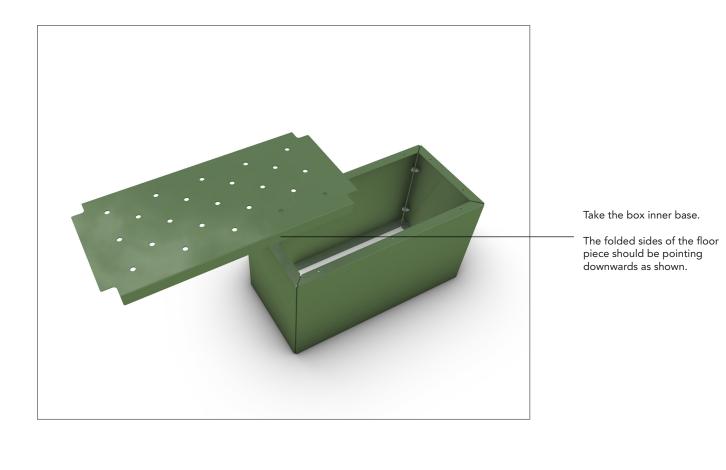

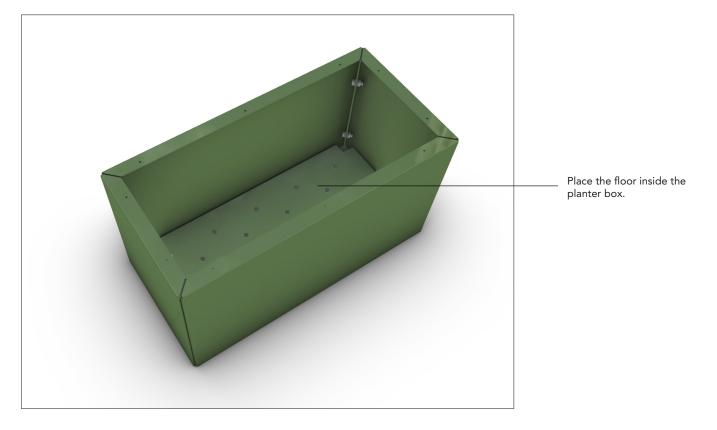

LAGERSTRÖM BALLOTA Planter box Mounting instructions

