LAGERSTRÖM
IVY parasol
Mounting instructions

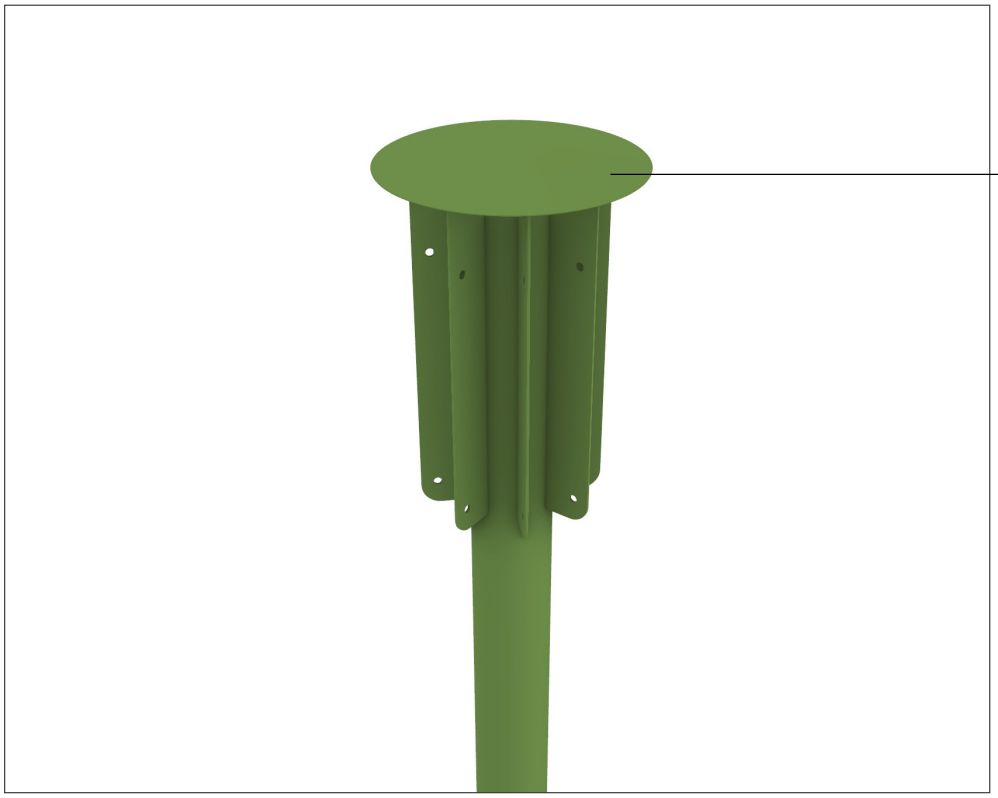

01.

Screw the post cover into position.

(Important to do this at this stage, as the top of the parasol canopy is not accessable later on)

Place the parasol parts on a soft surface to avoid damage to the paintwork.

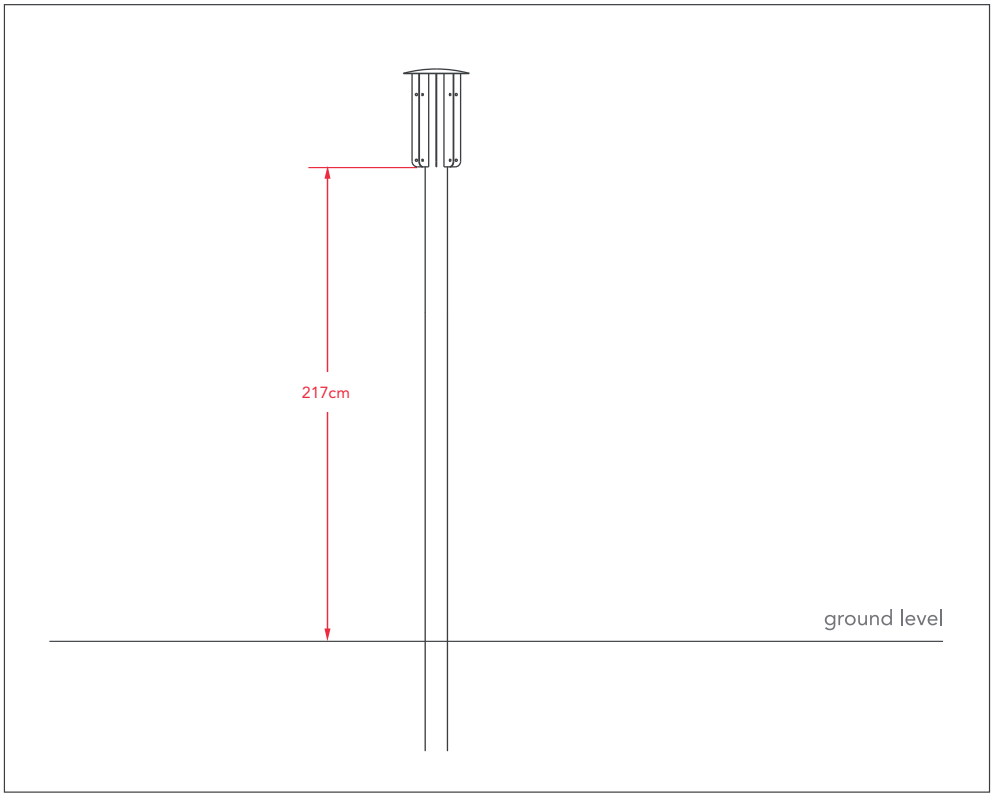

02.

Cast the post into the ground according to Lagerström exact instructions. Make sure the lowest point of the post ribs is 217cm over the ground level! (see illustration)

LAGERSTRÖM
IVY parasol
Mounting instructions

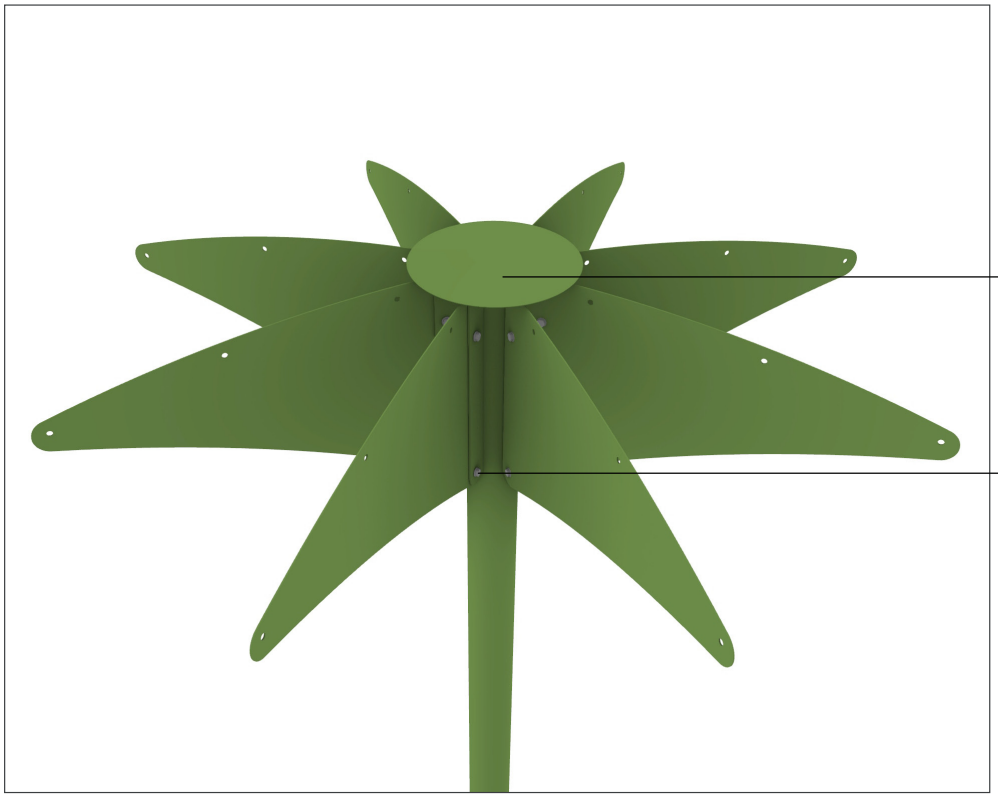

03.

Connect the 8 support wings to the center post.

Connect all wings on the left side of the post ribs! Same side for all the ribs! See illustration bellow.
Each wing with 2 bolts.

Important! Don't tighten the bolts all the way - leave them a bit loose!

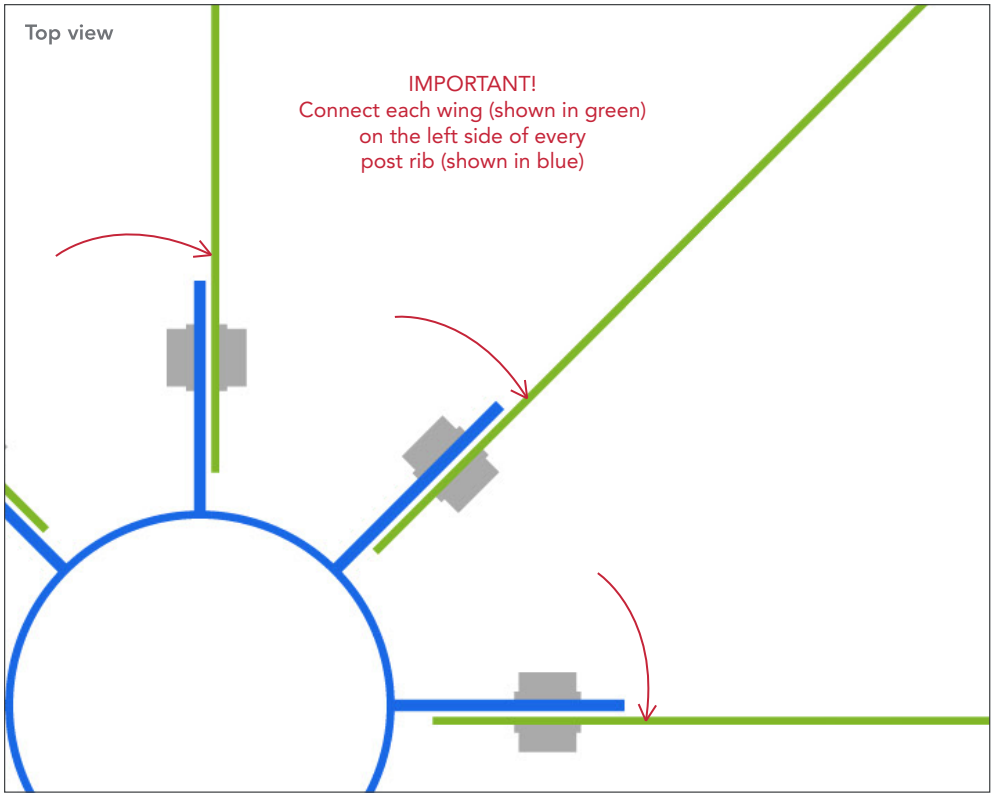

Connect the 8 triangle wings to the post as shown here.

LAGERSTRÖM
IVY parasol
Mounting instructions

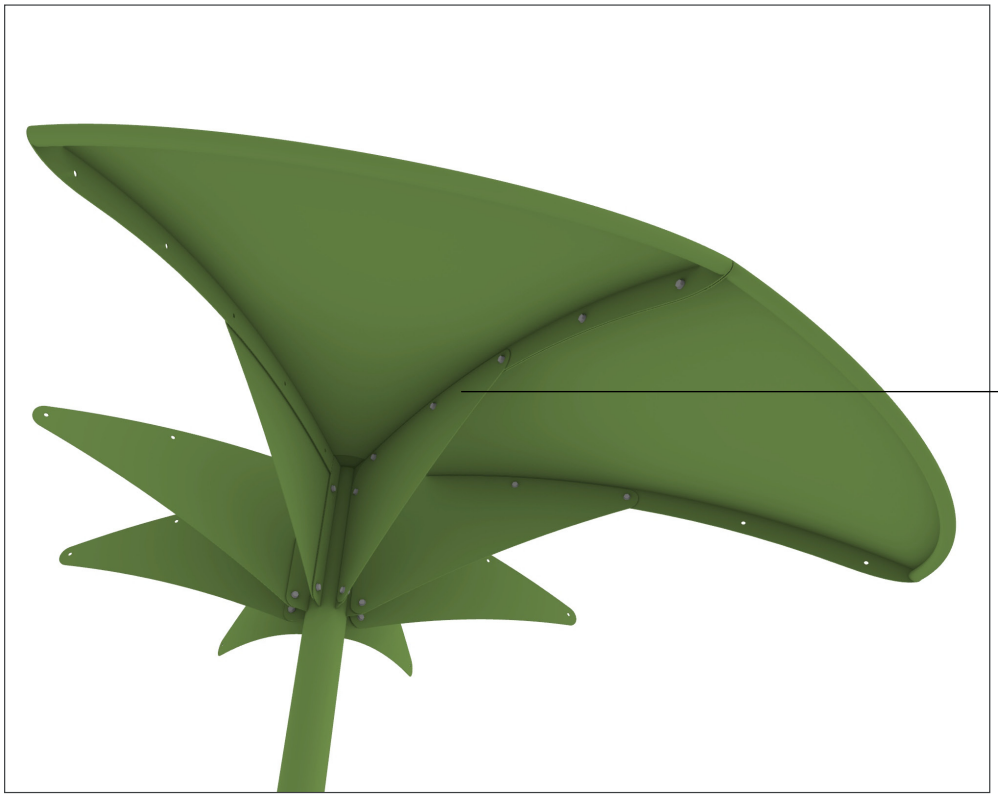

04.

Attach the canopy segments. 3 bolts to every wing.

Connect the segment walls on the right side of the triangular wings! Same side for all the wings! See illustration bellow.

Important! Don't tighten the bolts all the way - leave them a bit loose!

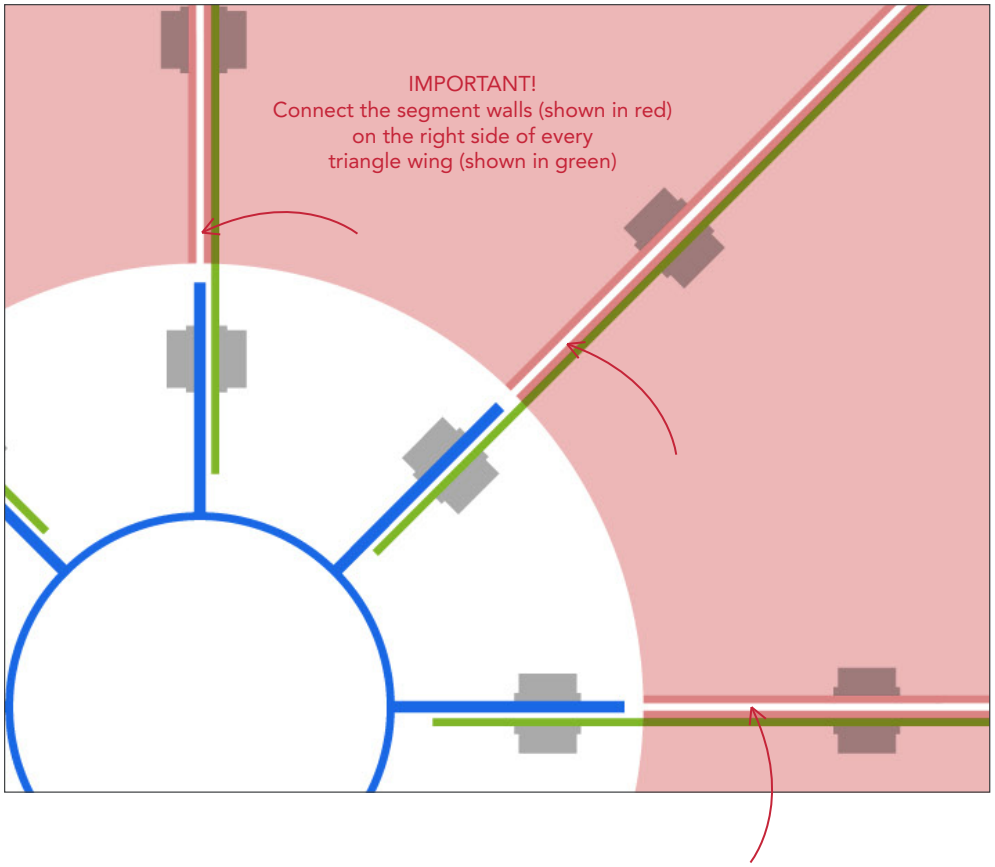

Connect the 8 canopy segments to the wings as shown here.

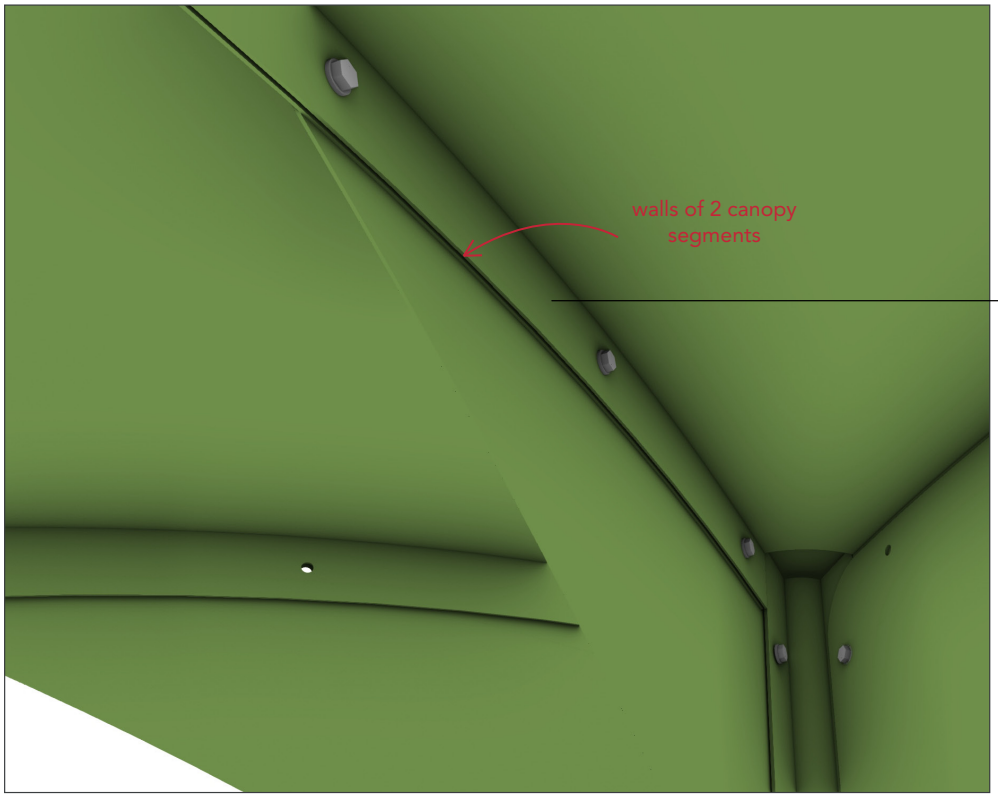

05.

Both vertical walls of the 2 adjacent canopy segments must be placed on the right side of the support wing, then connected to the wing with 3 bolts - as shown here.

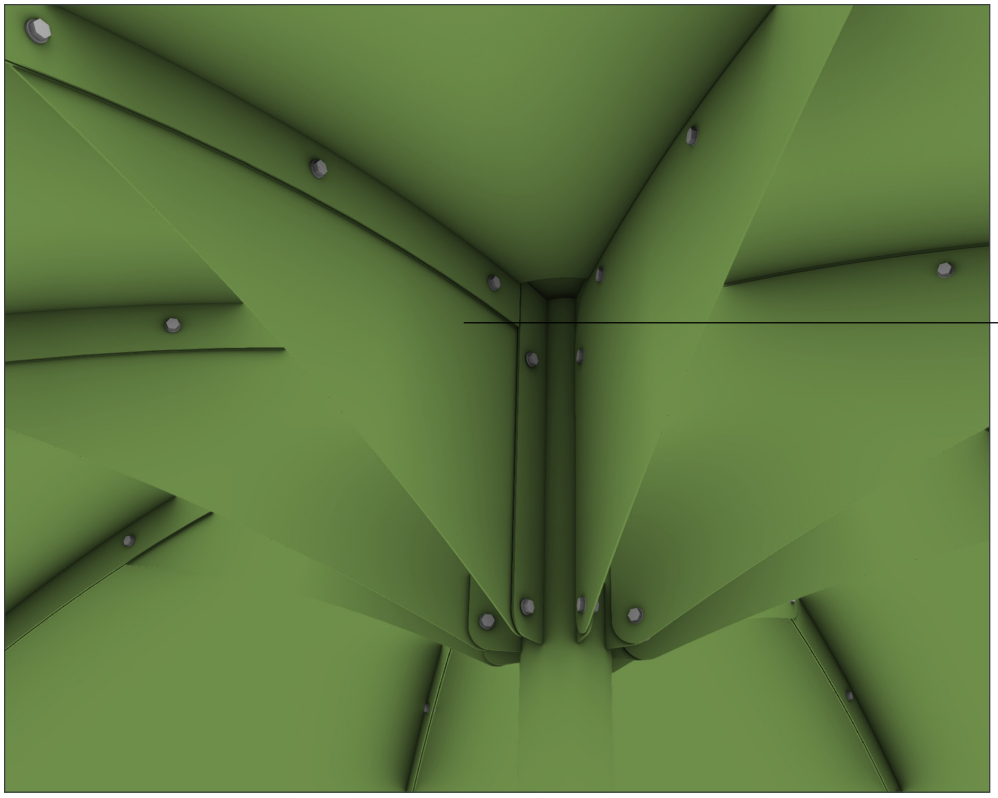

Connect all canopy segments and tighten the bolts.

After the assembly, under the canopy should look like this.

LAGERSTRÖM
IVY parasol
Mounting instructions